

PL-208/206/204 Wireless Electronic Switch Instruction

1、 Introduction

PL series wireless electronic switch adopts wireless RF technology, control the switches without direction limitation. The ID of each switch will not be repeated. The effective distance between the switch and the remote control is more than 50m. This PLseries devices can work with control panel. The PL series devices can be controlled by both the control panel and remote control.



PL-208



PL-206

2 、 Specification

Input Voltage: 220VAC

Power consumption:2W

Max Current Capacity:2A



Max Power Capacity:<500W

Operation mode :wireless remote control or manual

Effective distance:> 50M


3、 Installation

- 1) Remove the outer housing
- 2) Remove the buttons, then see 2 screw holes for fix the device.
- 3) Wiring as shown on the right
- 4) Fix the switch on the mount place.
- 5) Replace the removed outer housing.

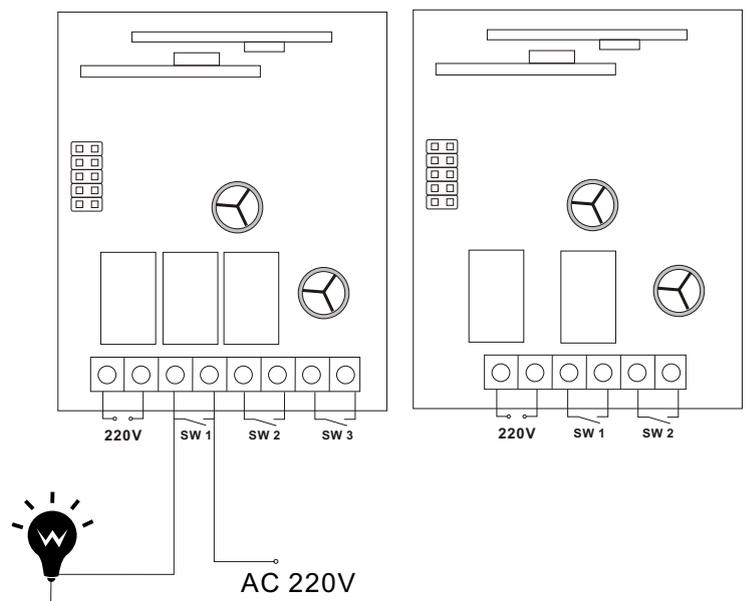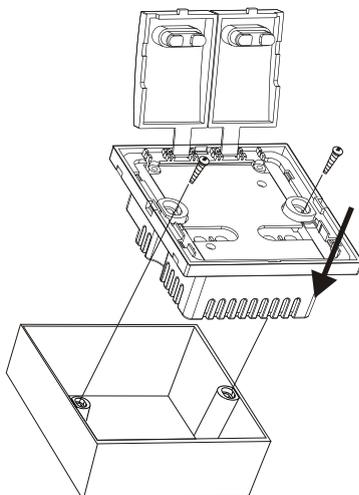

4、 Jumper switch instruction

- 1) MODEL 1,MODEL 2 and MODEL 3 are programmable jumper, setting the work models.
 A Short circuit model: when power off, the switch keep the turn on/off status as set.
 B Open circuit model: when power off, the switch turn off automatically.

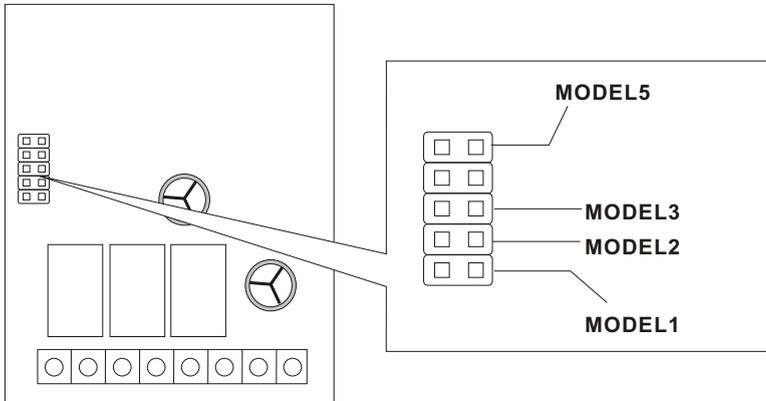


- 2) Setting communication with FOCUS control panel by set MODEL 5.
 A Short circuit: without communication with FOCUS control panel, PL can only be controlled by remote control .
 B Open circuit: keep communication with FOCUS control panel. Default set is open circuit.

5、 Button function instruction


- 1) Operation: Press the button for turn on/off, meanwhile the LED turn on/off.
- 2) Register PL devices to FOCUS control panels(when MODEL 5 set as “open circuit”) :Press the corresponding button for more than 20 seconds then release, PL devices will send signals to FOCUS control panel(now corresponding LED will twinkling).
Notice: pressing the button should be more than 20 seconds, otherwise the registration will be invalid.
- 3) Register PL to the remote control: Press all the buttons for more than 20 seconds(now all LED will twinkling) then release(all LED twinkling by turns). Now press all the buttons and trigger the remote control. Repeat the process to register next remote control(total 48 remote controls can be registered).
- 4)Delete the registered devices: Press all buttons for more than 60 seconds, now all LED twinkling fast, then control switch will delete the registered code.

6、 Remote control instruction

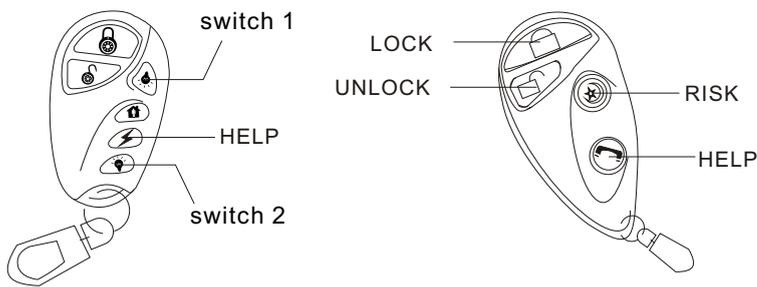

6-key remote control

4-key remote control

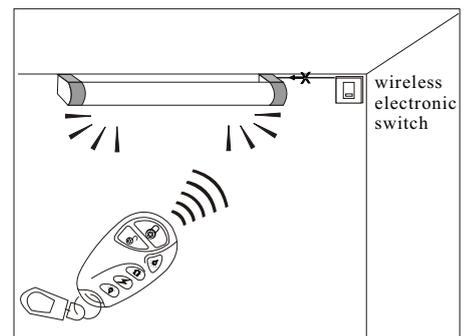

- A. Operate switch 1: press “ switch 1 ” on 6-key remote control or UNLOCK on 4-key remote control.
- B. Operate switch 2: press “ switch 2 ” on 6-key remote control or LOCK on 4-key remote control.
- C. Operate switch 3:press both “switch 1 ” and “switch 2 ” on the 6-key remote control or RISK on 4-key remote control.
- D. Switch off all switches: press “HELP” (Null function on 6-key remote control).