

MD-2018RVibration Sensor manual

1.Appearance



2.Features

MD-2018R vibration sensor has nice appearance, simple operation, easy to installed and strong applicability, can send out alarm signal accurate -ly, as well as monitor violent acts effectively. Pulse counting can be adjustment.

3.Specifications

Model: MD-2018R

Working Environment: -5°C ~50°C

Signal: 150m (in open area)


Working frequency: 433MHz /868MHz

Working voltage: 3V

Alarm: vibration


Working current: $\leq 10 \mu A$

4.Installation

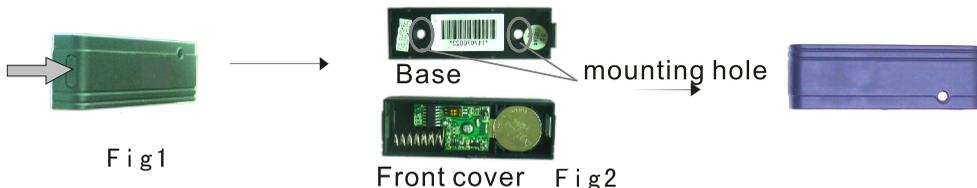

- ① Open the front cover by pressing the tap as arrow. ② Attach the base to the wall. ③ Replace the cover.

5.Dip switch

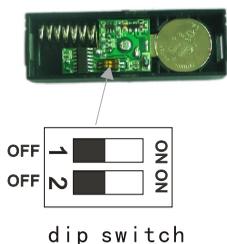

Sensibility adjustment

level 1--Maximum sensibility SW-2 off SW-1 off

(DEFAULTS)

level 2--level 2 SW-2 on SW-1 off

level 3--level 3 SW-2 off SW-1 on

level 4--minimum sensibility SW-2 on SW-1 on

